


Frame -1000  
View of Aft Face from Aft looking Fwd

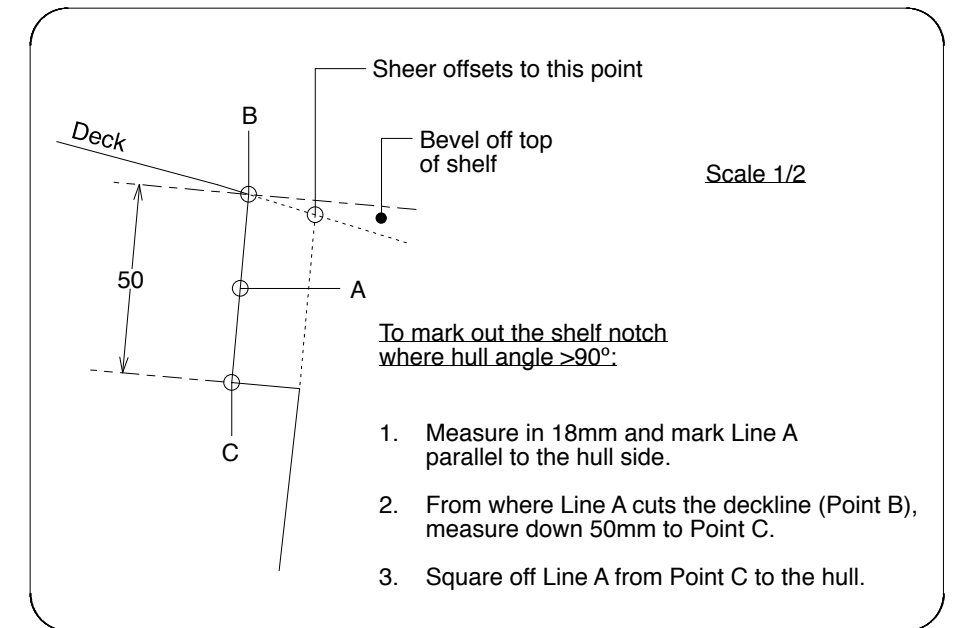


Notes:

1. Refer to Table of Offsets (Plan 165/004/008) for offset data
2. Set frame out and laminate to offsets of larger face and then bevel outer edges to smaller face offsets. See Instructions for details.

General Notes:

1. The Zero Point is the intersection of the datum waterline (dwl) with the forefoot.
2. The (fore-&-aft) centreline is marked c/line.
3. Offsets are measured about centreline.
4. Heights are measured above or below (marked "-") the dwl.
5. Positions are measured forward and aft (marked "-") of the Zero Point.
6. Offsets on diagonals are measured along the diagonal.
7. Waterlines are marked "w" followed by their height.
8. Buttock lines are marked "b" followed by their offset.
9. Diagonals are marked "d" followed by their height on the centreline and then their angle to it.
10. All offsets are to inside of skin unless otherwise noted.

Date	Change History
10 Mar 2014	Original
09 May 2014	Notch for hog increased to 132 wide

 <b>Whisstock</b> boats and boat plans support@whisstock.com	Scale 1/10 & 1/2
	Date May 09 2014
<b>Design 165</b> <b>Frame -1000</b> <b>Laminated Version</b>	Plan No. 165/004/002
	Issue No. 02
© Debenriver Ltd 2014 All Rights Reserved	All dimensions in millimetres unless otherwise noted