

**Note:**


Hinged supports slide up support locators and drop over end of wedge so that they do not get knocked shut by mistake.

End fiddles slide down grooves in leaves in "down" position, so that leaves and ends form a fiddled box when the table is down. Fit anti-rattle hooks to table legs to locate bottom of leaves a parallel 200 apart in "down" position.

Hinge leaves on 75mm brass butts. Hinge supports on 60mm brass butts.

Secure table to sole with 4 off table screws.

- General Notes:**
1. All dimensions are in millimetres unless otherwise noted.
  2. The Zero Point is the intersection of the Datum Water Line (dwl) with the stemface.
  3. Positions are measured fwd and aft (marked "-") of the Zero Point.
  4. Heights are measured above and below (marked "-") the dwl.
  5. Offsets are measured each side of the fore-&-aft centreline (marked "c" or c/line).
  6. Waterlines are designated "wl" followed by their height.
  7. Buttocks are designated "b" followed by their offset.
  8. Diagonals are designated "d" followed by their start height on the centreline and their angle to it.
  9. Offsets on diagonals are measured down the angle of the diagonal.
  10. Offsets are to inside of skin unless noted otherwise.

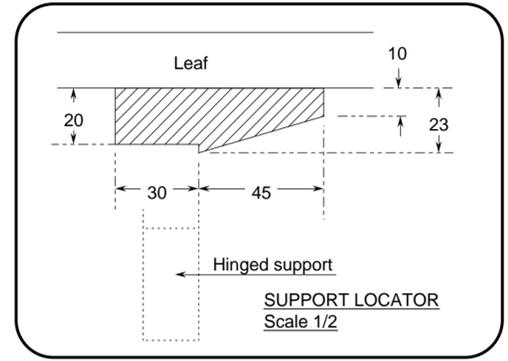

 <b>Whisstock</b> boats and boat plans support@whisstock.com	Scale	1/10 & 1/2
	Date	20/09/2008
	Plan No.	067/010/41
	Issue No.	01 web
	Drawing Size	585 x 305 - 23" x 12"